

Laying Instruction for MoleBarrier®



Preparations

Before installation make sure that MoleBarrier® is not damaged. Please consider also during the installation that only the undamaged product can protect against moles.

Preparation of the Ground

The surface on that the mole barrier shall be laid out has to be dug out 5 cm to 10 cm. Please consider that afterwards the product may not be damaged during gardening!

Level out all unevenness of the ground and flatten the surface.

Installation of MoleBarrier®


Roll out MoleBarrier® on the even ground. Make sure that the fabrics will overlap at least 15 cm.

In order to prevent the mole from entering the garden horizontally make sure that the mole barrier will also be installed vertically at the edges of the surface. How deep you will have to set MoleBarrier® at the rim depends on the level of the ground-water.

Fix MoleBarrier® at the margins and the overlaps with U-pins to the ground.

Now cover MoleBarrier® with about 5 cm to 10 cm of soil.

MoleBarrier® can also be covered with bark mulch, crushed stones or gravel.

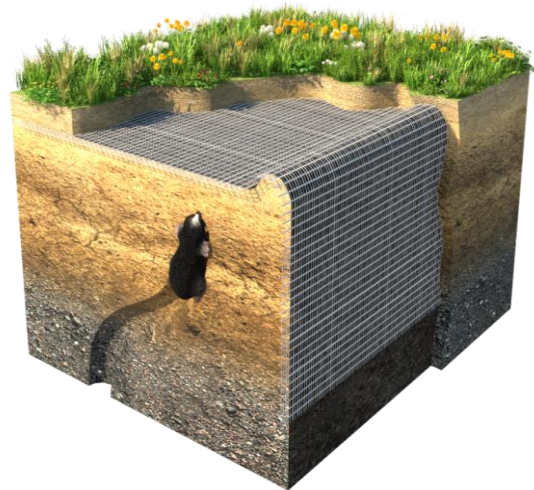

07/2015

Green for Roof and Garden